Panels

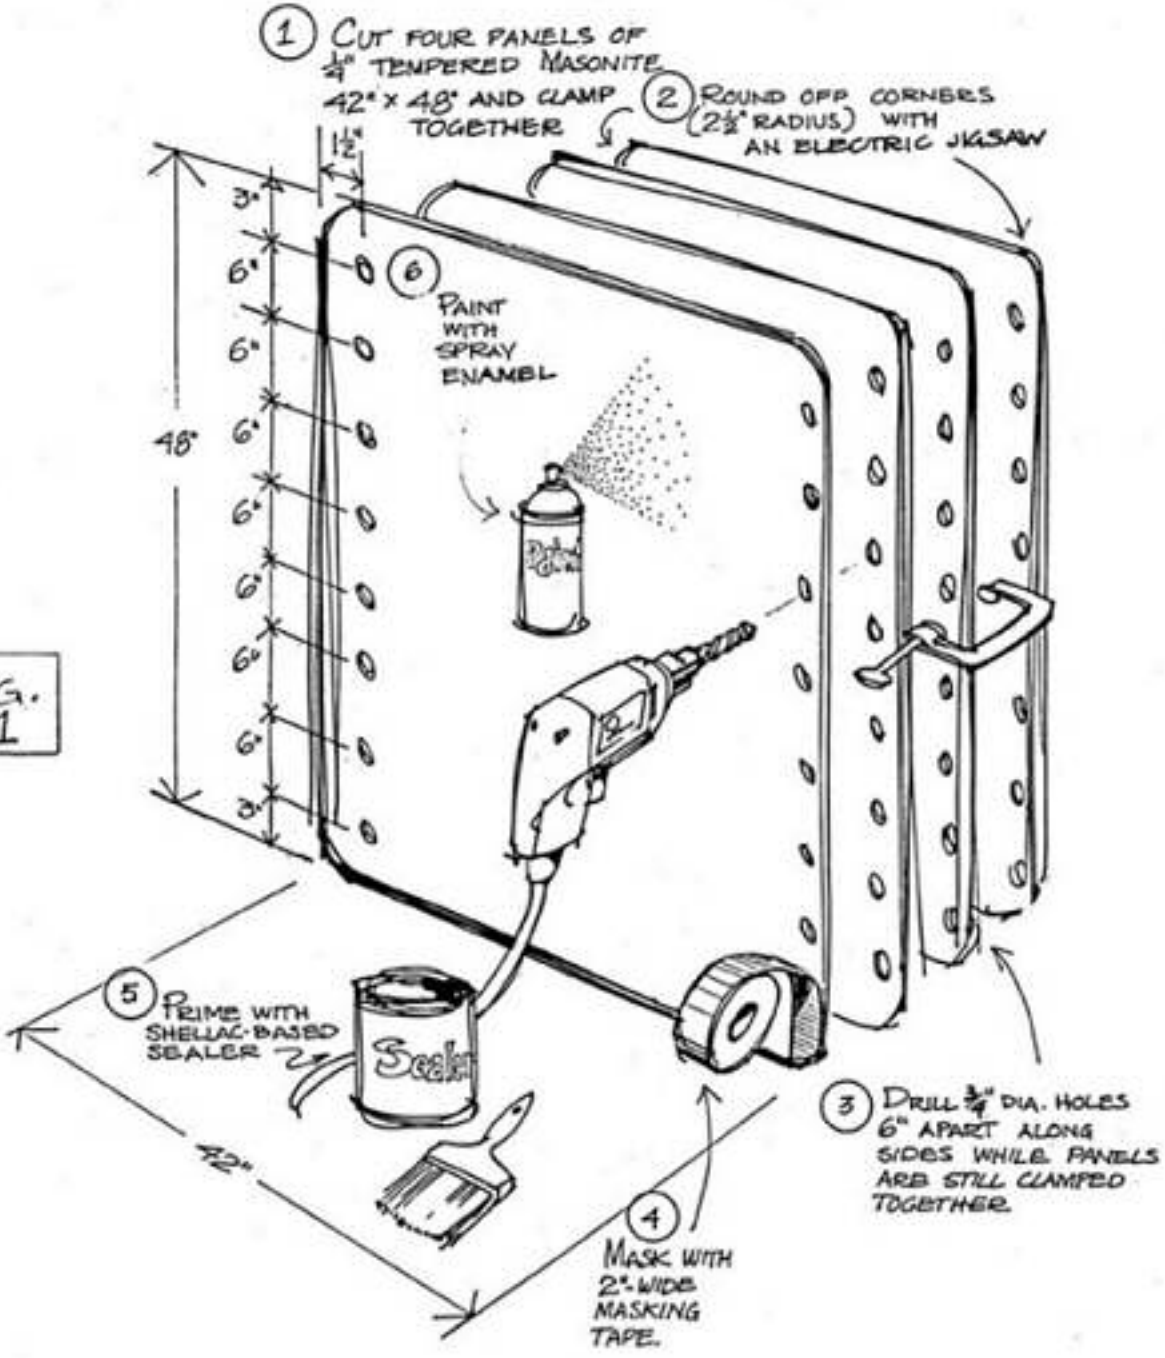
1 CUT FOUR PANELS OF ¼" TEMPERED MASONITE 42" x 48" AND CLAMP TOGETHER
2 ROUND OFF CORNERS (2½" RADIUS) WITH AN ELECTRIC JIGSAW
1½"
3"
6"
6"
6"
6"
6"
6"
6"
6"
3"
48"
6 PAINT WITH SPRAY ENAMEL
5 PRIME WITH SHELLAC-BASED SEALER
Seal
42"
3 DRILL ¾" DIA. HOLES 6" APART ALONG SIDES WHILE PANELS ARE STILL CLAMPED TOGETHER.
4 MASK WITH 2"-WIDE MASKING TAPE.

FIG. #1